

Bosch / Radionics 7212, 7412 & 9412

Panels:

7212, 7412, 9412

Keypads:

D720, D1255, D1260

Arm: Code + [ENT] Shortcuts: [COMMAND][1] Arms All; [COMMAND][2] Arms Perimeter, entry zone is instant; [COMMAND][3] Arms Perimeter, entry zone delays.

Disarm: Code + [ENT]

Check Faulted Zones: Press any numeric key [0-9] and keypad will scroll through faulted zones

Force Arm Over Bad Zones:

Code; Keypad displays [CHK AREA X]; Press [NEXT] thru the list of all faulted points OR just press [COMMAND]. [FORCE ARM?] will display at the end of the list. Press [ENT].

Smoke Reset: After silencing alarm with Code + [ENT], press [COMMAND][4][7] to reset smoke detectors.

\* If smoke has not cleared, the alarm may resound. Clear the detector of smoke and repeat the sequence to reset.

Chime Mode On/Off: [COMMAND][6]

Change Code: It is recommended that you contact your security company and make changes under their direction. [COMMAND][5][5]; Enter Old Code + [ENT]; Enter New Code + [ENT]; Enter New Code Again + [ENT]. (To ADD a code, [COMMAND][5][6]. To DELETE a code, [COMMAND][5][3].)

Power Down Panel: Pull one wire on NP7-12 battery in panel. Then unplug the panel transformer if you know where it is. It is a beige box plugged into a nearby power outlet. If you can't find it, then disconnect AC power by pulling wire on terminal 1, upper left corner of panel.

Product: Commercial burglar alarm system keypad and commercial fire alarm system keypad.